


Waterproofing Details

General Overview

5. Apply bead of mastic along top edge and secure with a termination bar

4. Apply full sheets of AC HydroSeal 3000 vertically, from just below grade to bottom of footing, completely covering the 18" vertical strip and the 9" horizontal strip applied earlier. Repeat until entire foundation is covered.

3. Apply a 18" wide strip of AC HydroSeal 3000, centered vertically around all corners.

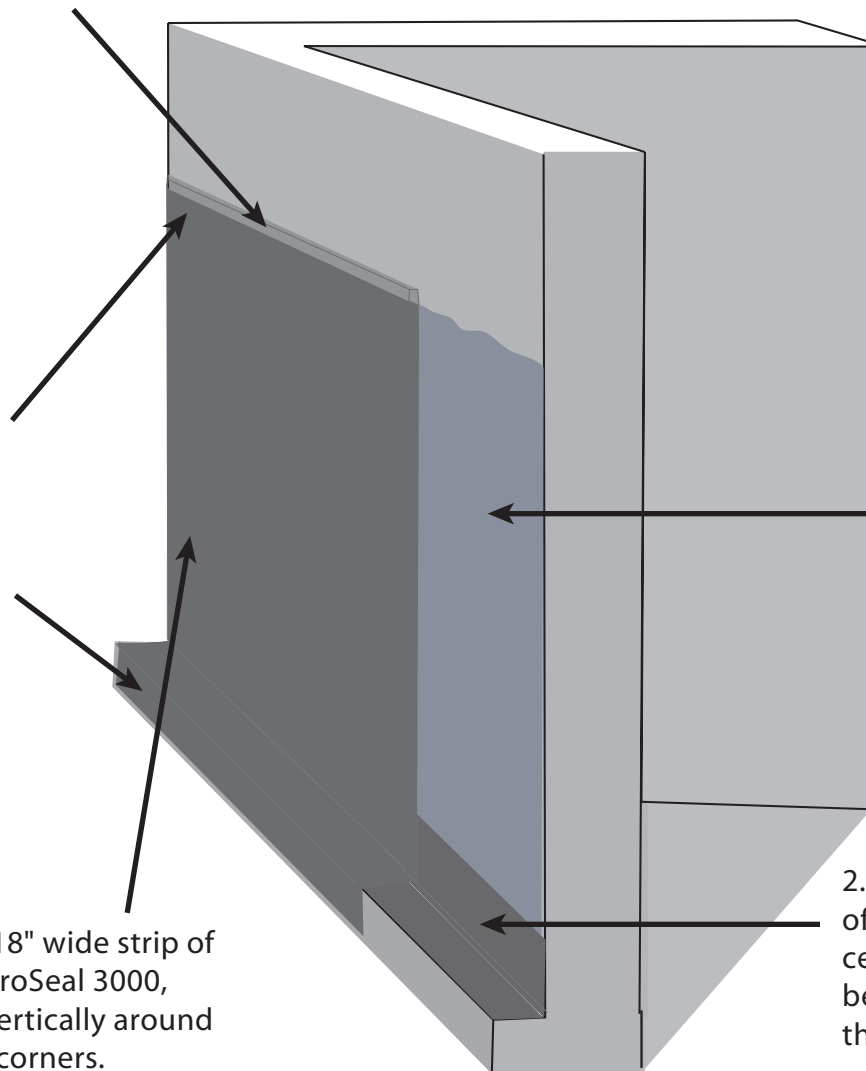

1. Prime surface

2. Apply a 9" wide strip of AC HydroSeal 3000, centered horizontally between the wall and the footing



FOUNDATION WATERPROOFING

1/1/05

NOT DRAWN TO SCALE

WP-1

