


AC HOMESEAL APPLICATION INSTRUCTIONS

Prime all metal, concrete and OSB surfaces that will come in contact with the adhesive backing of AC Homeseal. Let primer dry completely.


1. Sill Application

Center the AC HomeSeal so that the sill plate is completely covered and fold the remainder of the membrane over the exterior wall. Extend at least 8" past the rough opening.

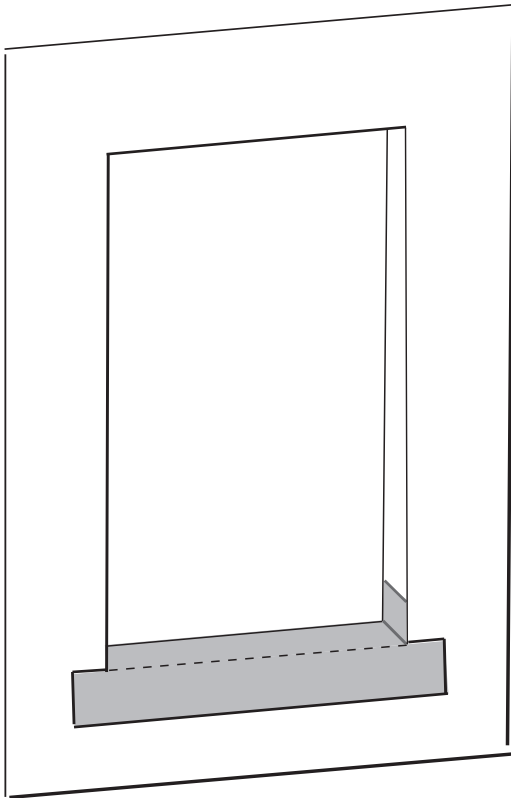


2. Jamb Application

Install window in accordance with Manufacturer's instructions. Apply the AC HomeSeal over the window jambs. Extend at least 8" past the rough opening.

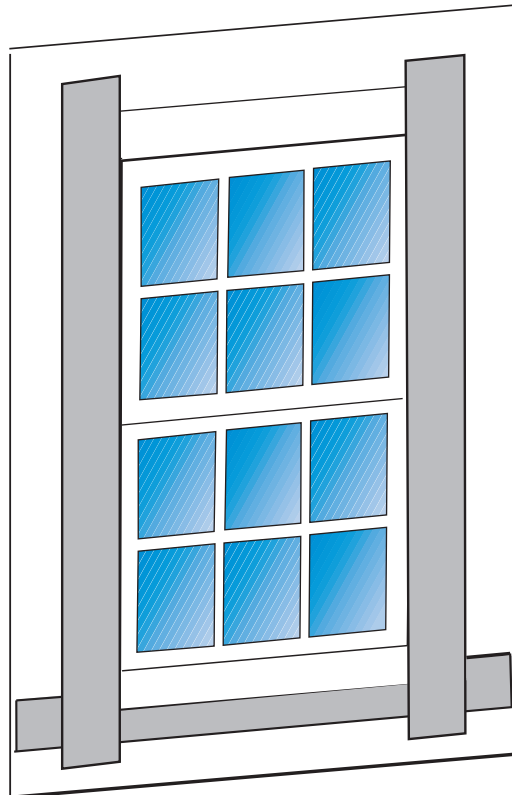

3. Header Application

Apply the AC HomeSeal over the header. Extend at least 8" past the rough opening. Roll AC HomeSeal with roller to insure good initial adhesion.

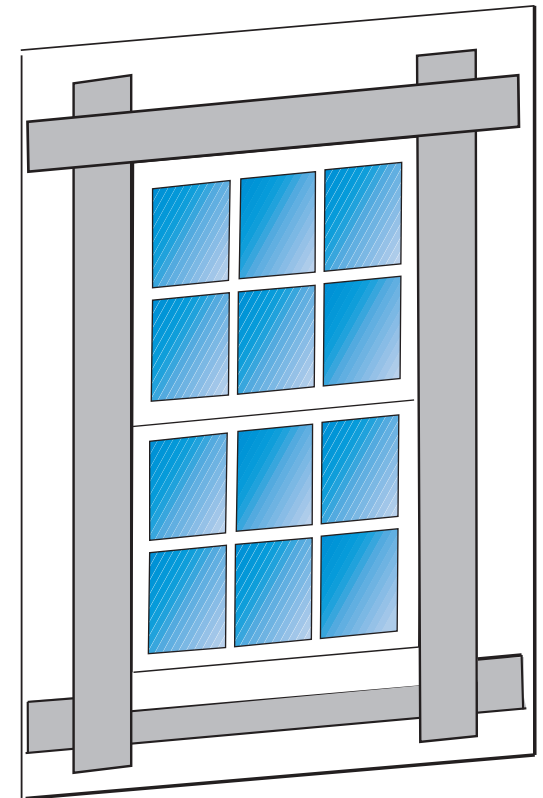

USE SAME APPLICATION METHOD FOR DOORS